

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

EvTools

User's Manual



Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 2 of 26	Revision : 0
Controlled Copy		Yes	No	Authorized Signature	
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

Table Of Contents			
Index	Name	Description	Page No.
1.	Prerequisites	Prerequisites	05
2.	Instructions	General instructions for using EvTools Utility	06
3.	Contact Us		

User Manual for EvTools Version 1.0.0 (April 2014)

User manual Version 2.0.5

Specifications are subject to change without prior notice.

Technologies assumes no liability for maloperation or improper use of products.

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 3 of 26	Revision : 0
Controlled Copy	Yes	No		Authorized Signature	
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

All other trademarks, brands and names are the property of their respective owners and are protected by US and international copyright and trademark laws.

No portion of this guide may be reproduced in any form or by any means without the express written permission of Technologies.

© Copyright 2014, All rights reserved.

Creator :	Approver:	Version : 1
Distribution : Proprietary Limited Unlimited	Page 4 of 26	Revision : 0
Controlled Copy Yes No	Authorized Signature	
Release ID : NA		

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

Overview

This guide provides procedure for how to operate EvTools Utility.

Hardware requirements:

- i) EvTools Utility
- ii) FIM Module

General Steps Showing How to Use EvTools Utility

Creator :	Approver:	Version : 1
Distribution : Proprietary Limited Unlimited	Page 5 of 26	Revision : 0
Controlled Copy Yes No	Authorized Signature	
Release ID : NA		

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

1) FIM RS232 PC connection:-




Connect the FIM module to computer as per above connections.

2) Open EvTools Utility:

Open EvTools Utility. Click on the Connect button. If Connection is made properly, you will get message window as follows:

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 6 of 26	Revision : 0
Controlled Copy	Yes	No		Authorized Signature	
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

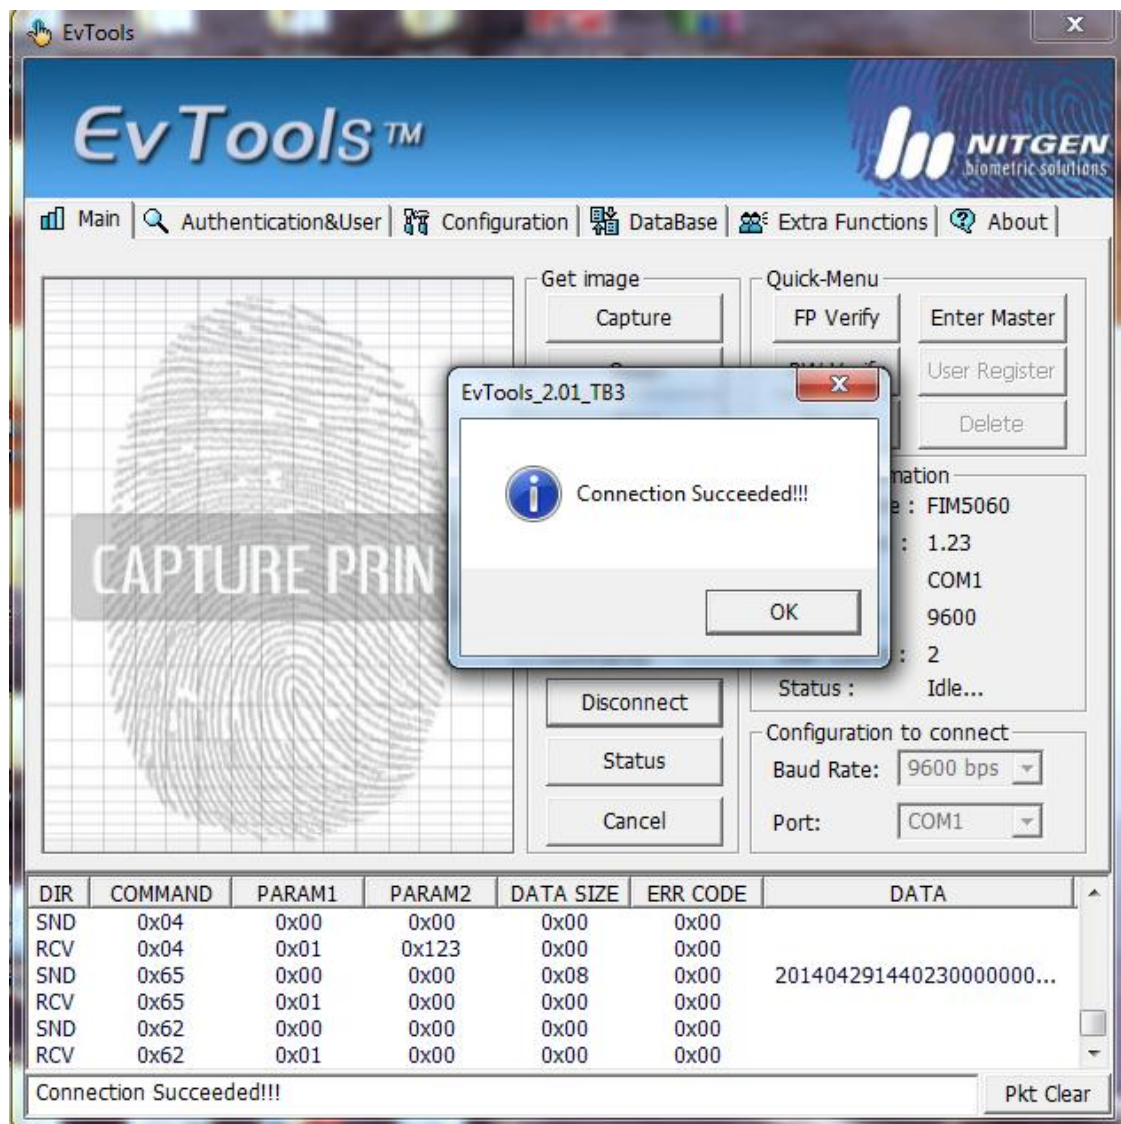


3) Enter Master Mode:

- i) To perform any operation you need to be in master mode.

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 7 of 26	Revision : 0
Controlled Copy	Yes	No	Authorized Signature		
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

ii) Click on authentication&User.

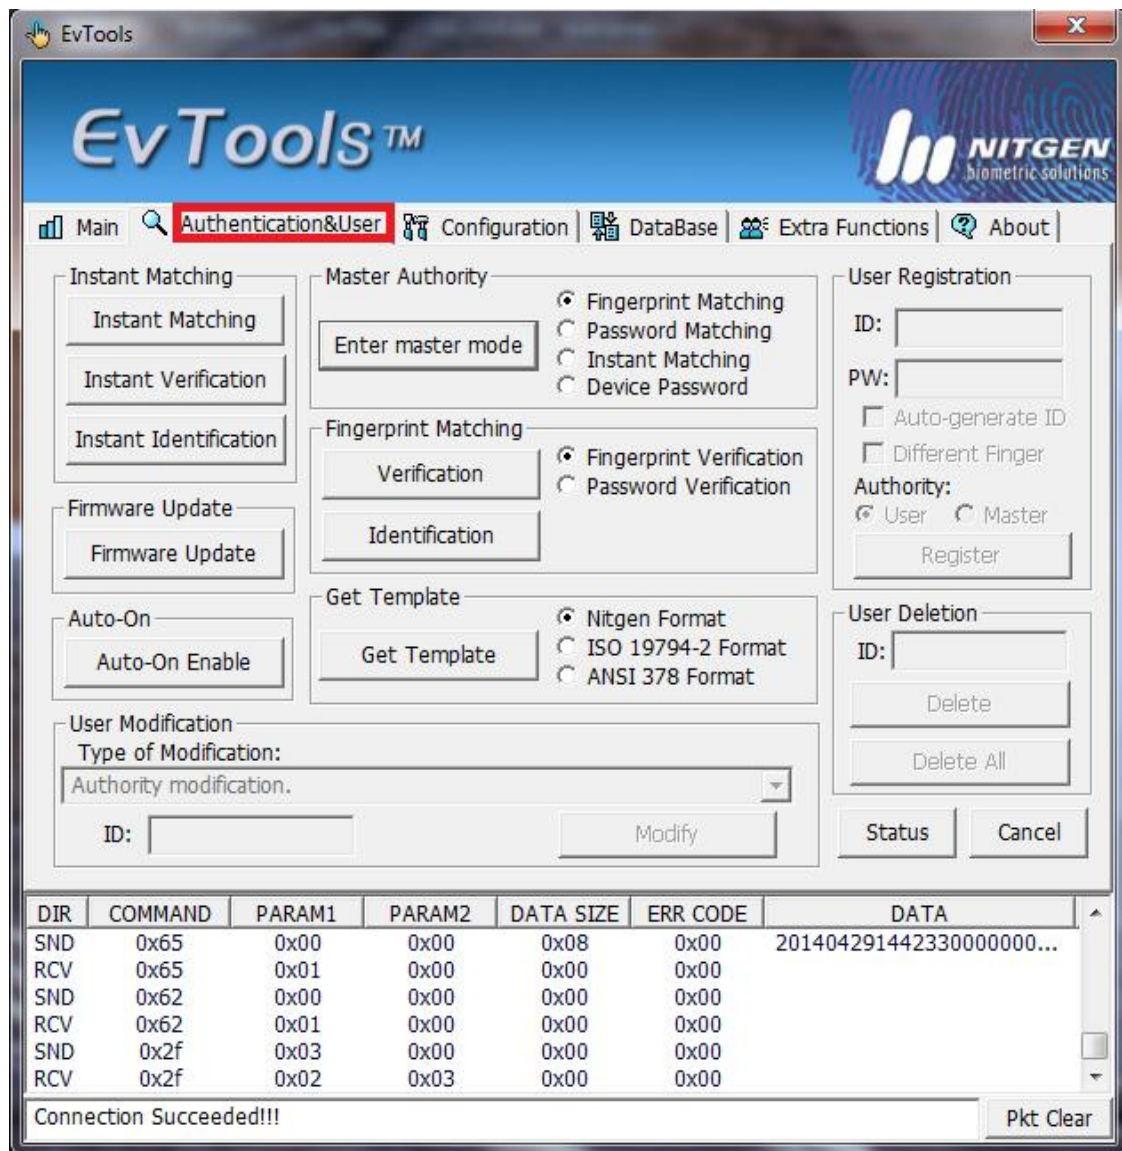

iii) Click on Enter master mode. You can enter in two ways.

a) **fingerprint matching**:-It will ask for id and finger.


b) **password matching**:-It will ask for id and password.

b) **password matching**:-

Input your id.

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 8 of 26	Revision : 0
Controlled Copy	Yes	No		Authorized Signature	
		Release ID : NA			


Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

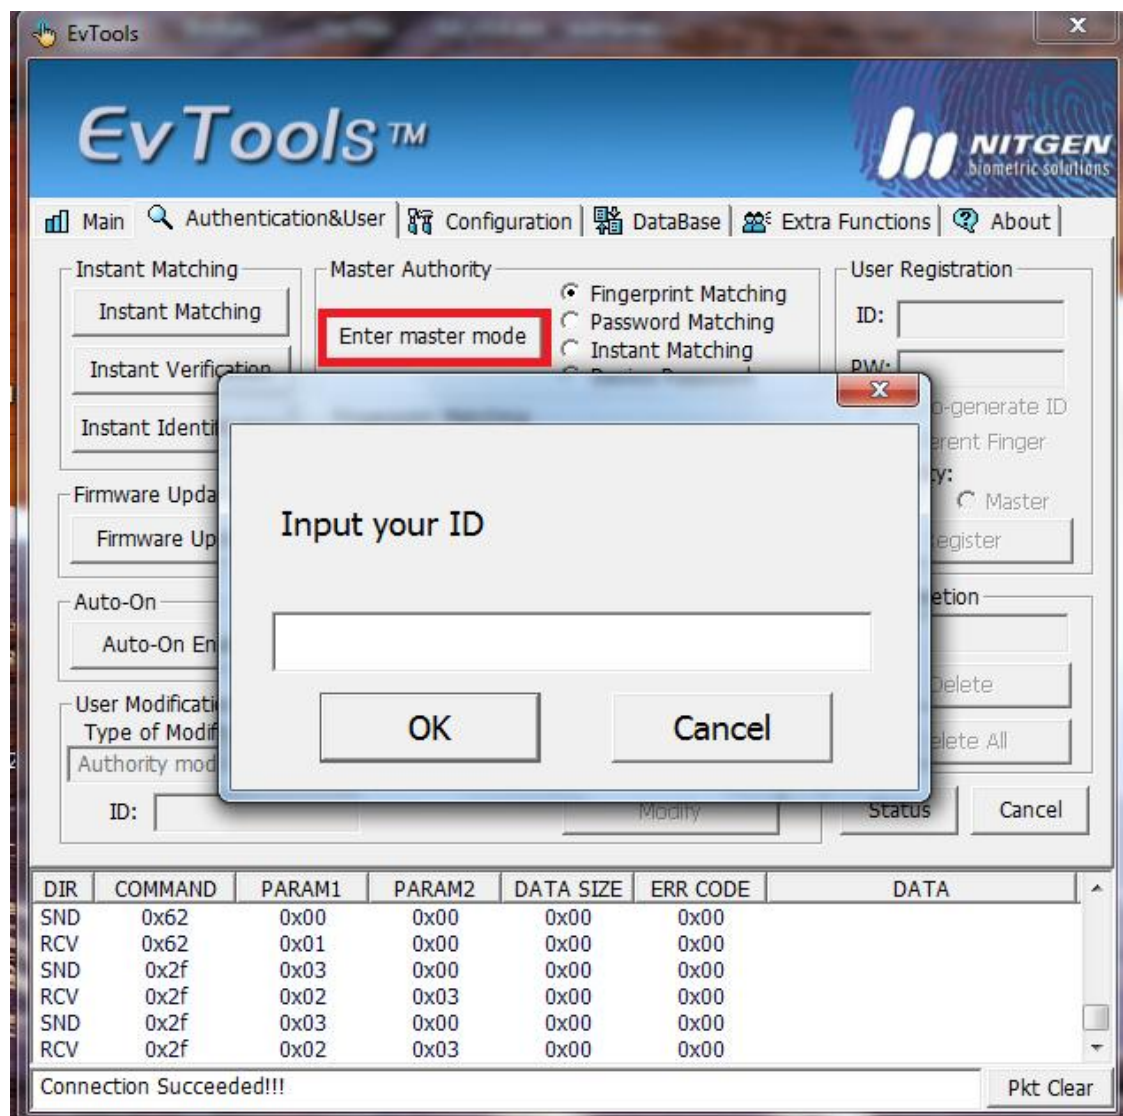

Input your password.

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 9 of 26	Revision : 0
Controlled Copy		Yes	No	Authorized Signature	
		Release ID :			
		NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

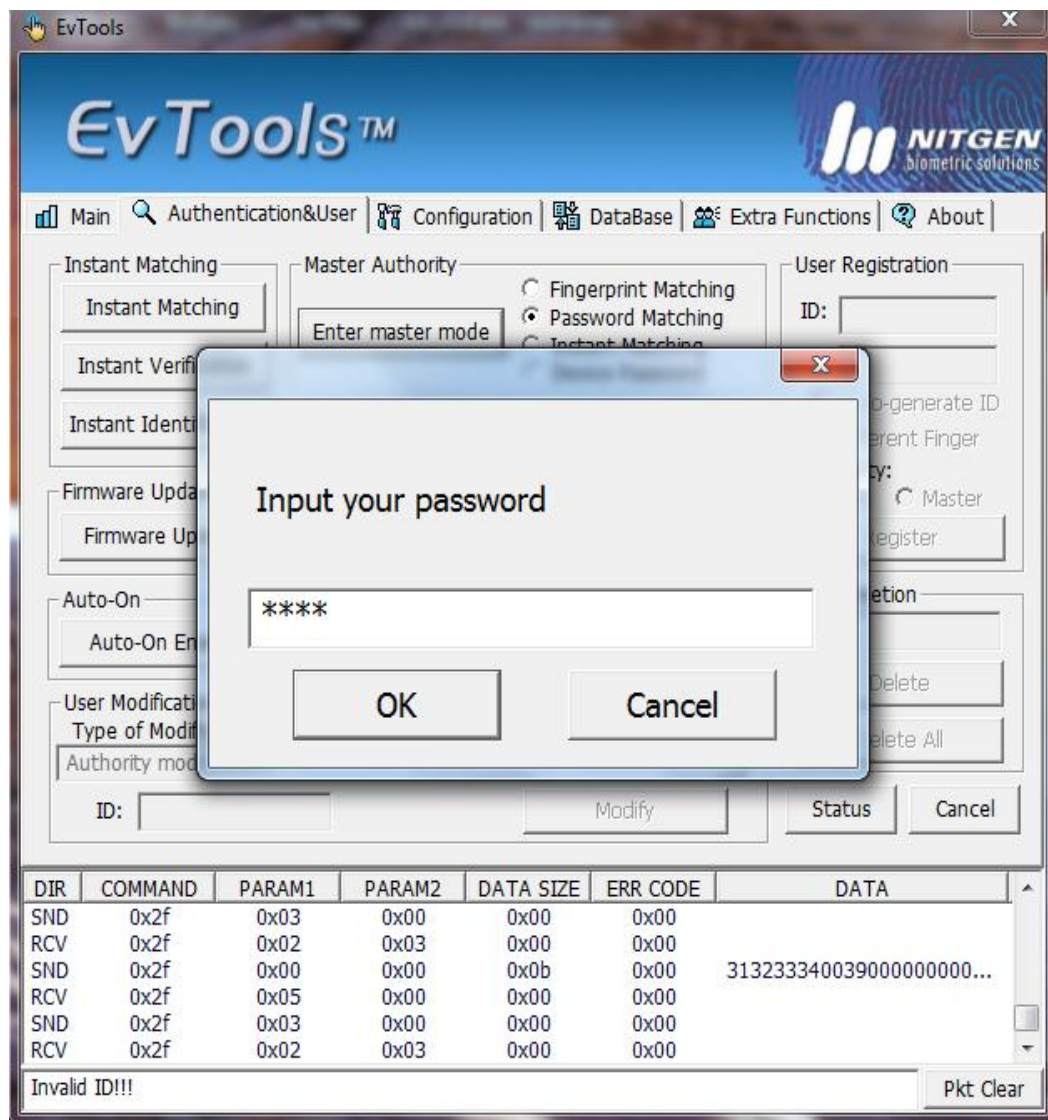


4) USER REGISTRATION:

i) To enroll the finger you have to provide Id and password in the User

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 10 of 26	Revision : 0
Controlled Copy	Yes	No	Authorized Signature		
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

registration section. You can assign the authority as normal user or master user. Click on register.

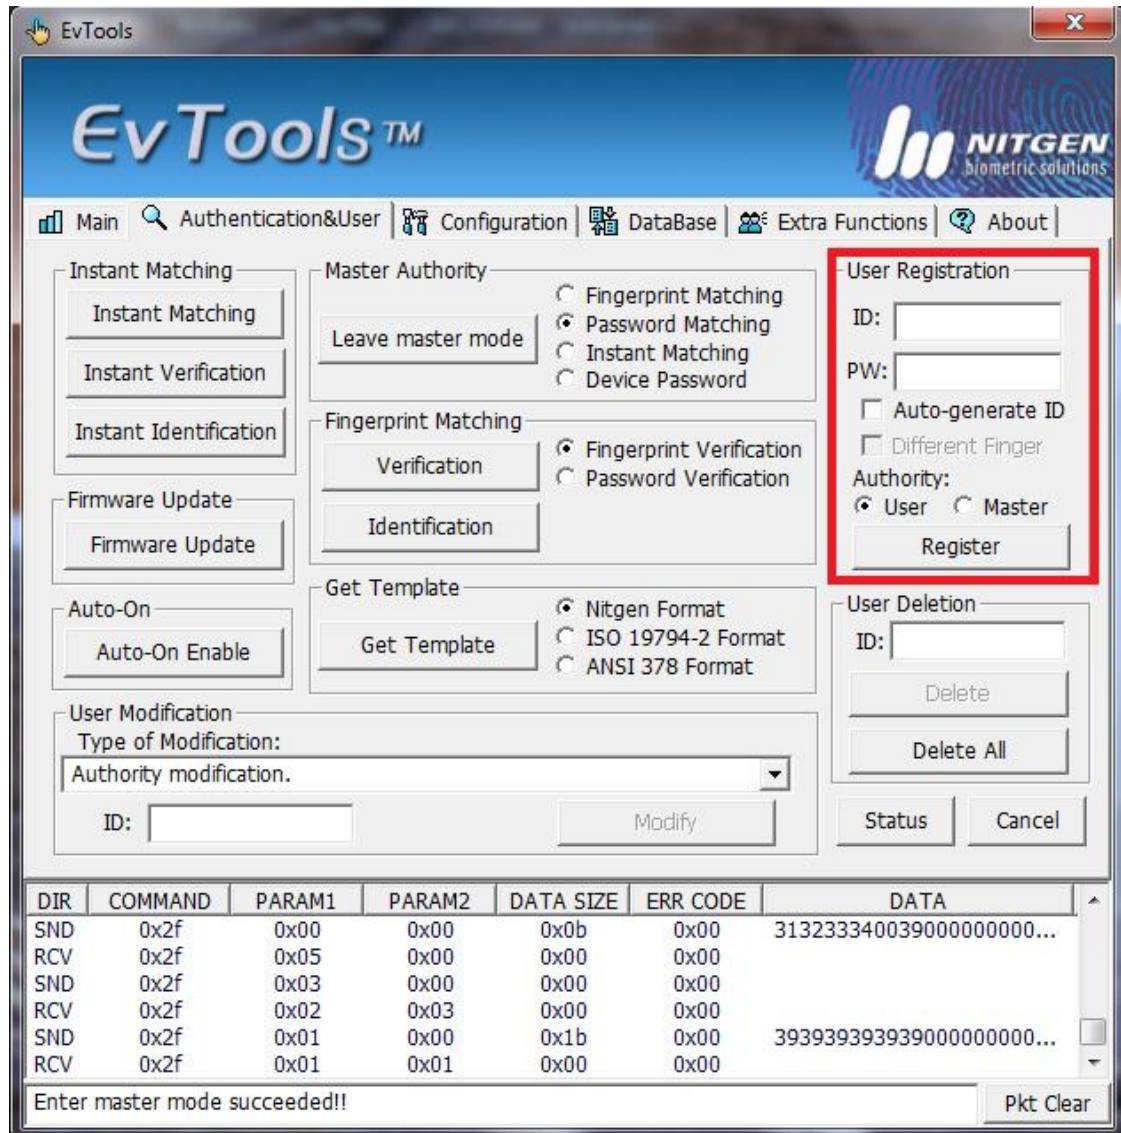


ii) Scanner will light up. Put Your finger on scanner for a moment,Following window will open.

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 11 of 26	Revision : 0
Controlled Copy	Yes	No	Authorized Signature		
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------


iii) Press OK and put same finger again on scanner for moment Following

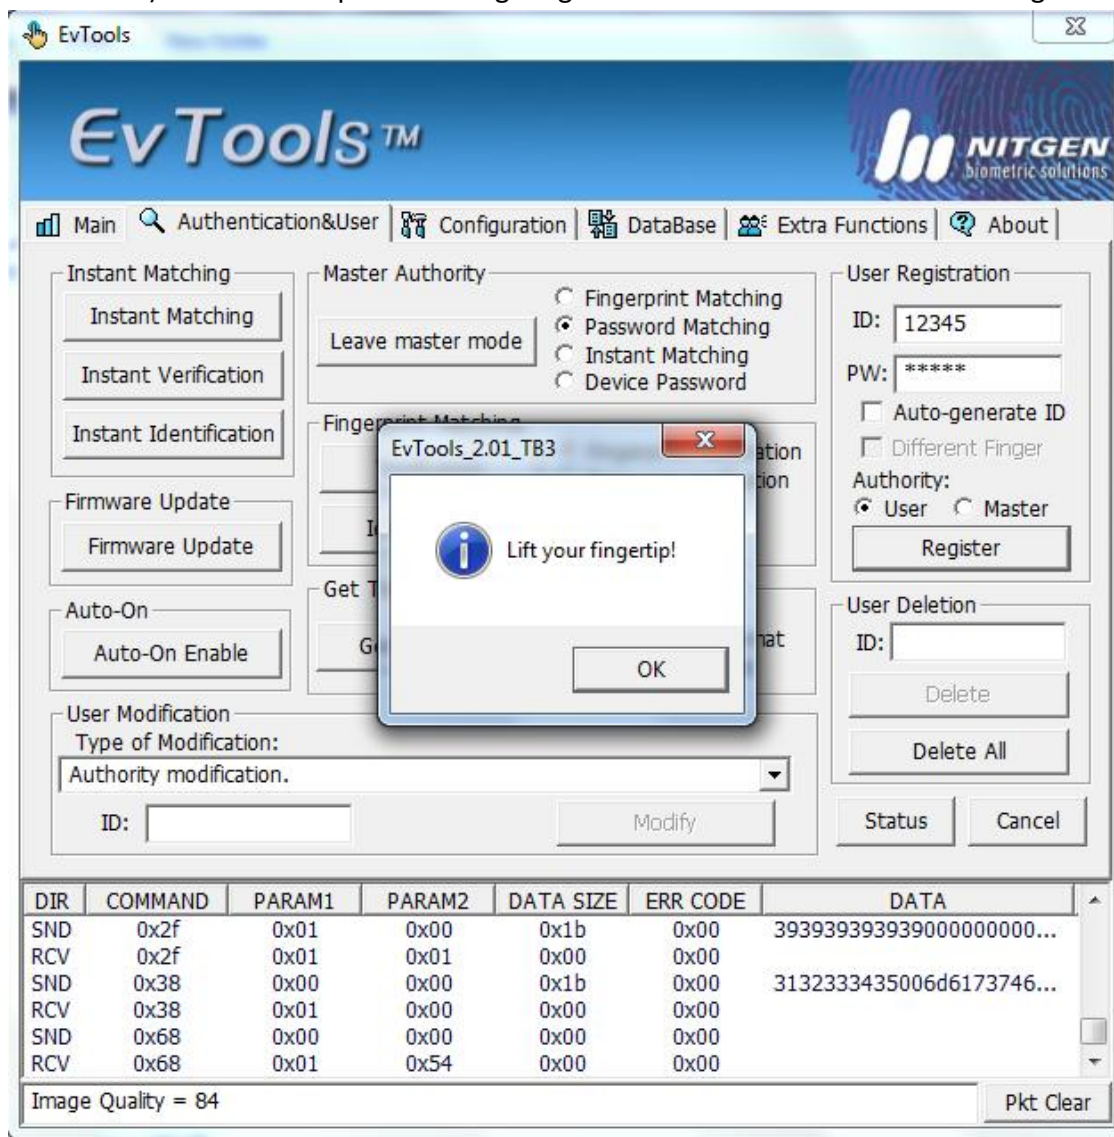

screen will appear.

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 12 of 26	Revision : 0
Controlled Copy	Yes	No	Authorized Signature		
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

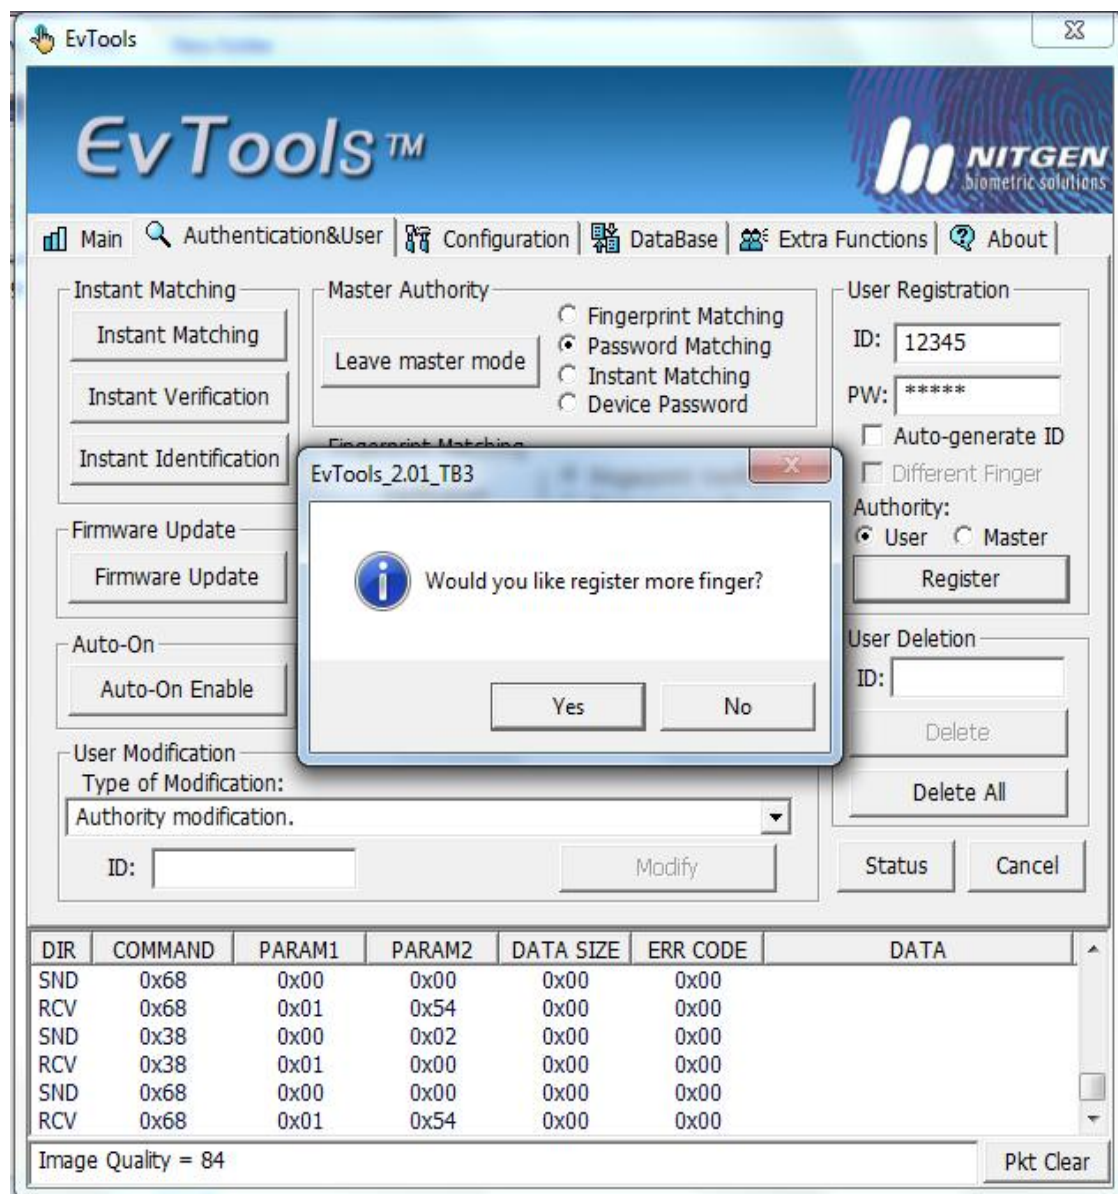


Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 13 of 26	Revision : 0
Controlled Copy		Yes	No	Authorized Signature	
		Release ID :			
		NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :

iv) If you want to register more than one finger for a same user you have to press YES otherwise press NO. If you press YES then Use Different finger and follow steps (3.ii) and (3.iii). If You press NO following window will appear:

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 14 of 26	Revision : 0
Controlled Copy		Yes	No	Authorized Signature	
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

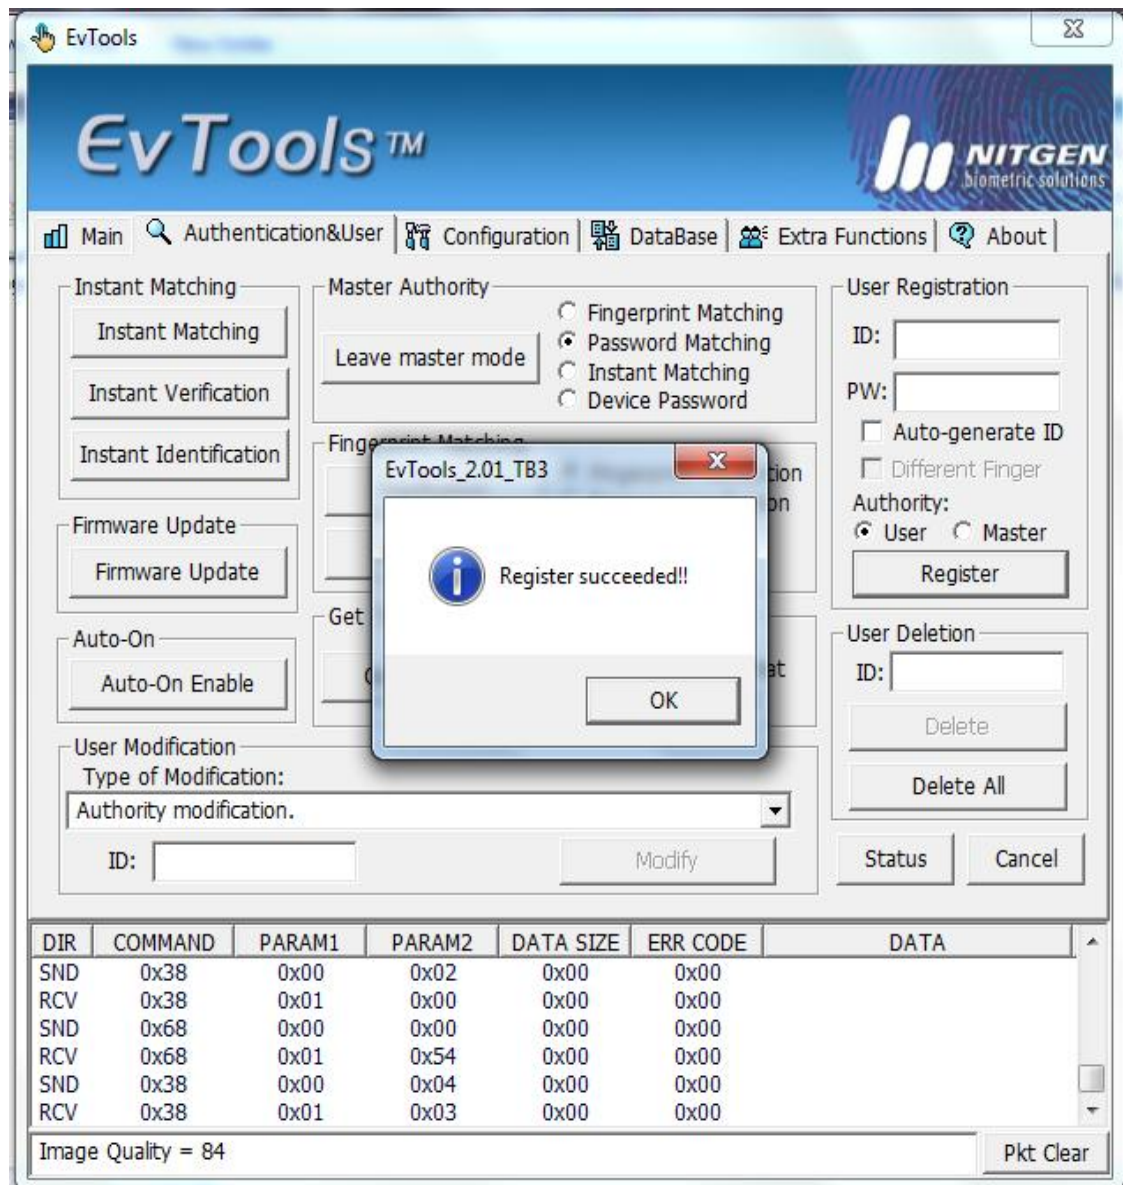


5) USER DELETION:

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 15 of 26	Revision : 0
Controlled Copy	Yes	No		Authorized Signature	
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

i) To delete the user, you have to provide Id and click delete button. To delete all the users click delete all.

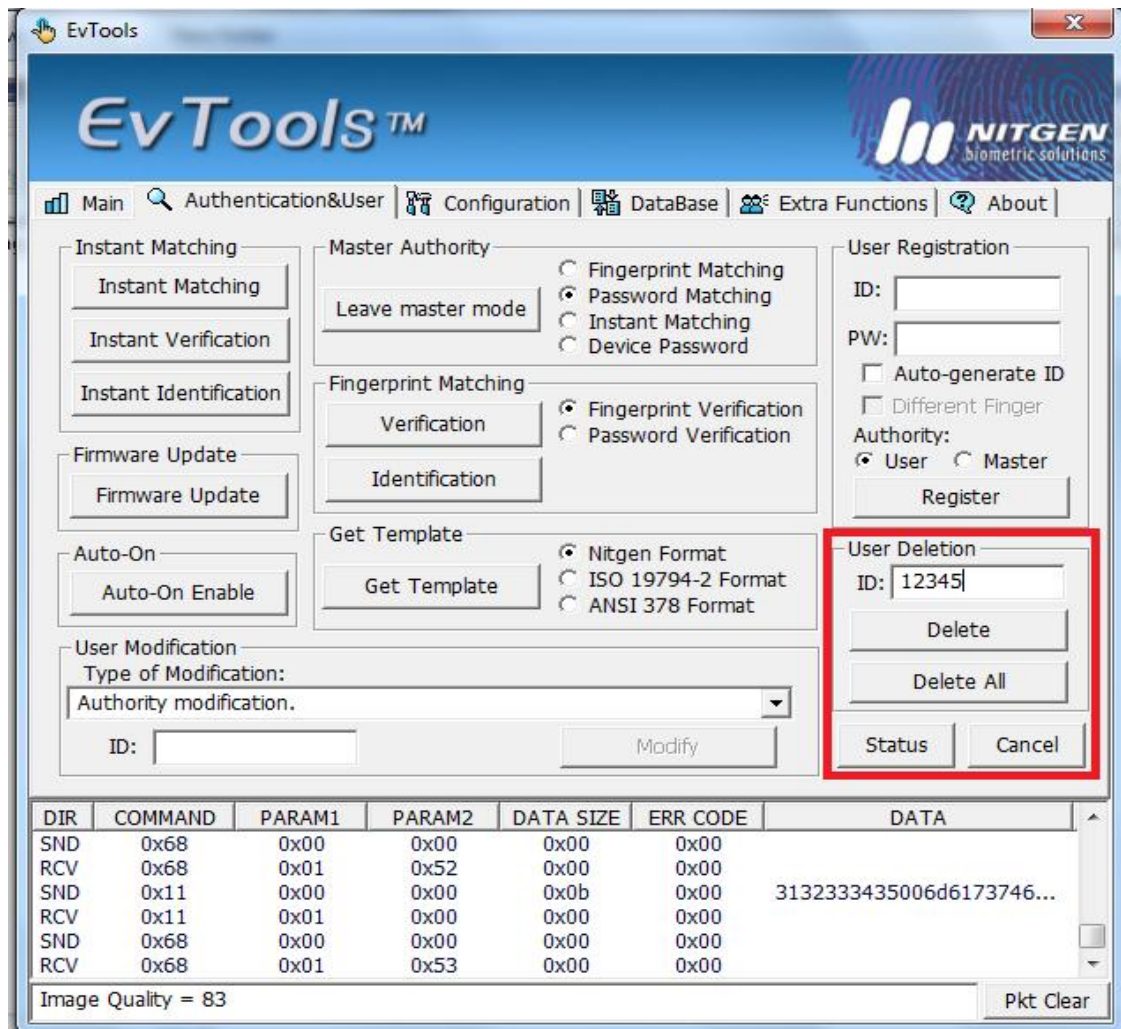


6) USER IDENTIFICATION:

i) Click on identification, Scanner will glow. Put the finger on scanner. If you are

Creator :	Approver:	Version : 1
Distribution : Proprietary Limited Unlimited	Page 16 of 26	Revision : 0
Controlled Copy Yes No	Authorized Signature	
Release ID : NA		

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

registered you will get success message as follows:

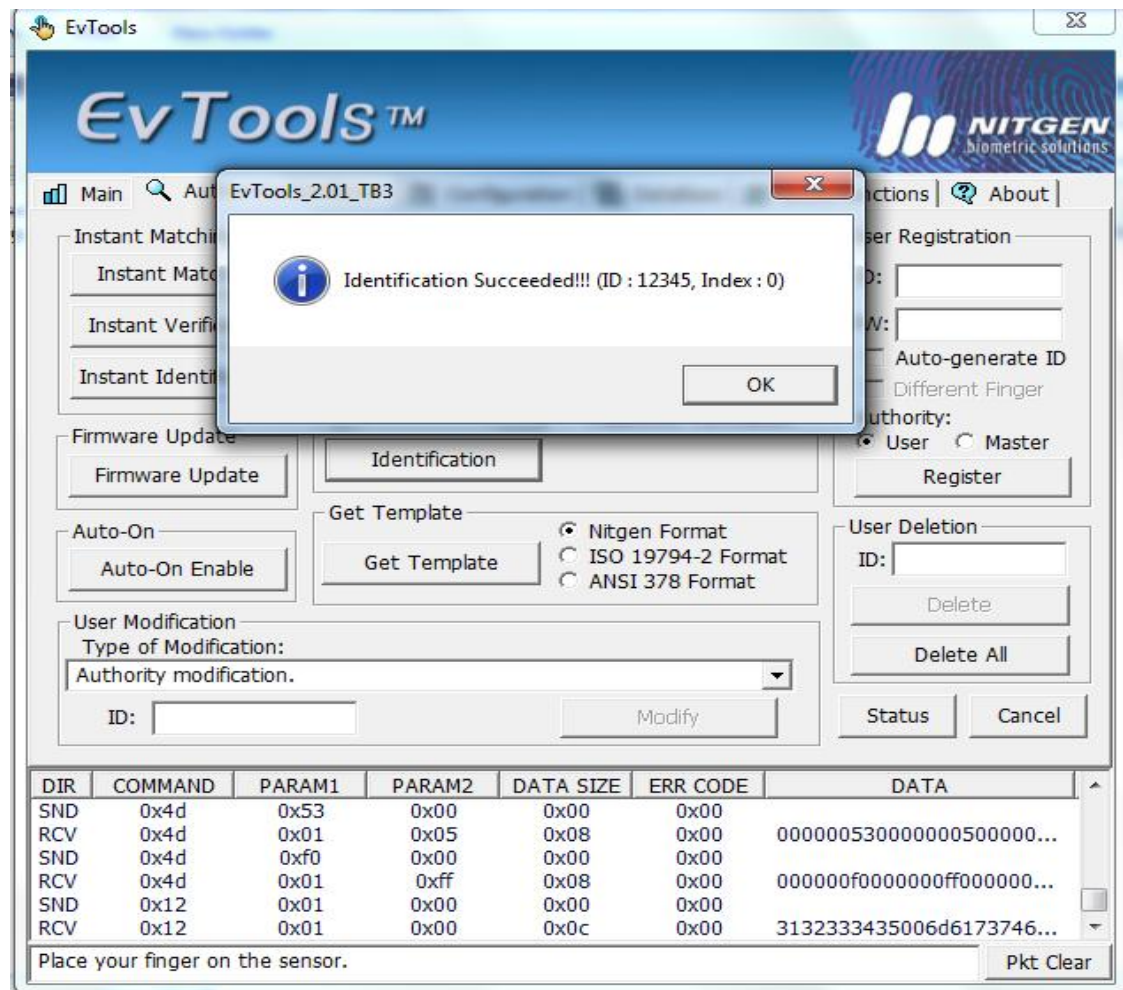


7) USER VERIFICATION:

- Click on Verification, Following window will open.
- Input Your Id which you want to verify.
- Put the Finger on Scanner.
- If user is verified successfully you will get success message as follows.


Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 17 of 26	Revision : 0
Controlled Copy	Yes	No		Authorized Signature	
		Release ID :			
		NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

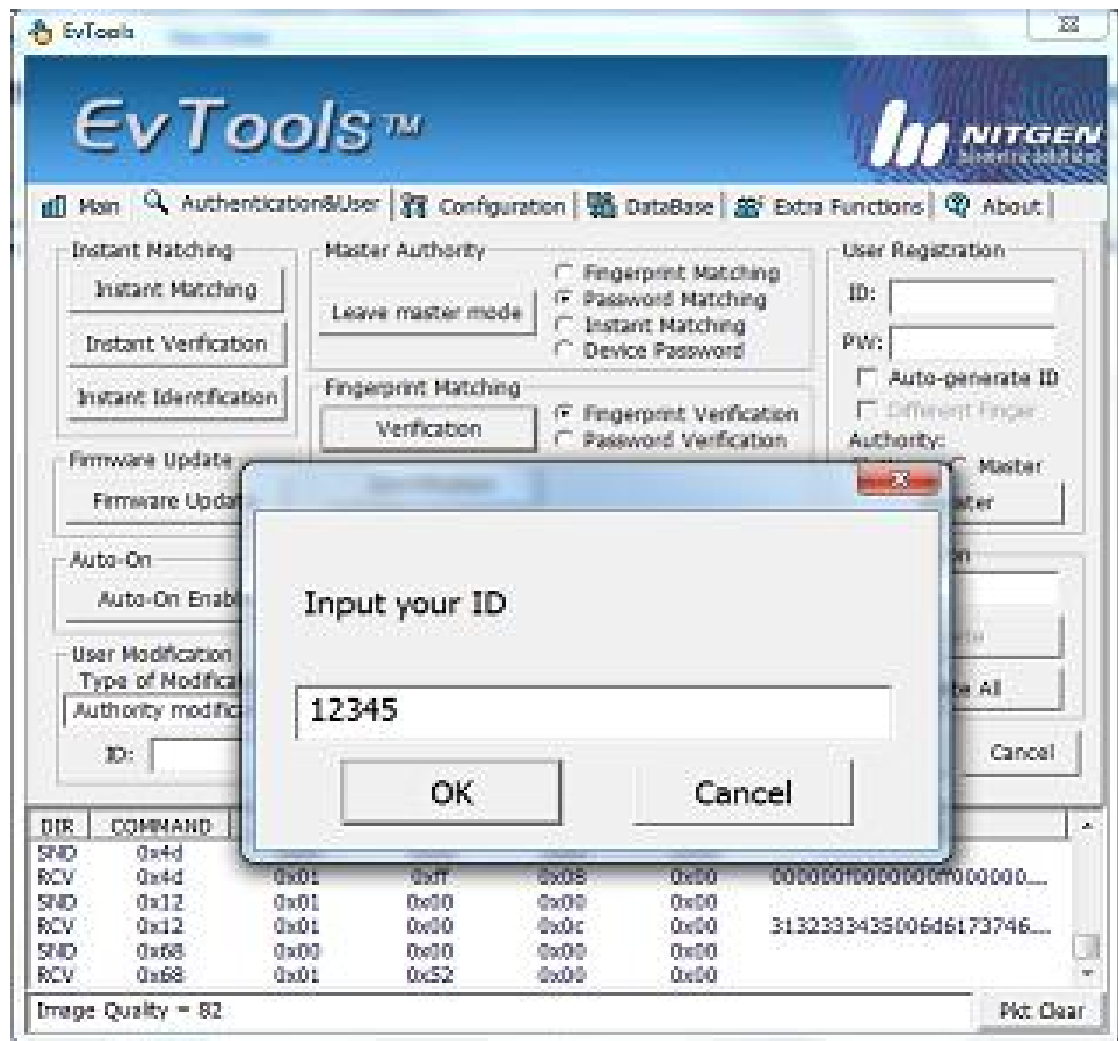

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 18 of 26	Revision : 0
Controlled Copy	Yes	No	Authorized Signature		
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

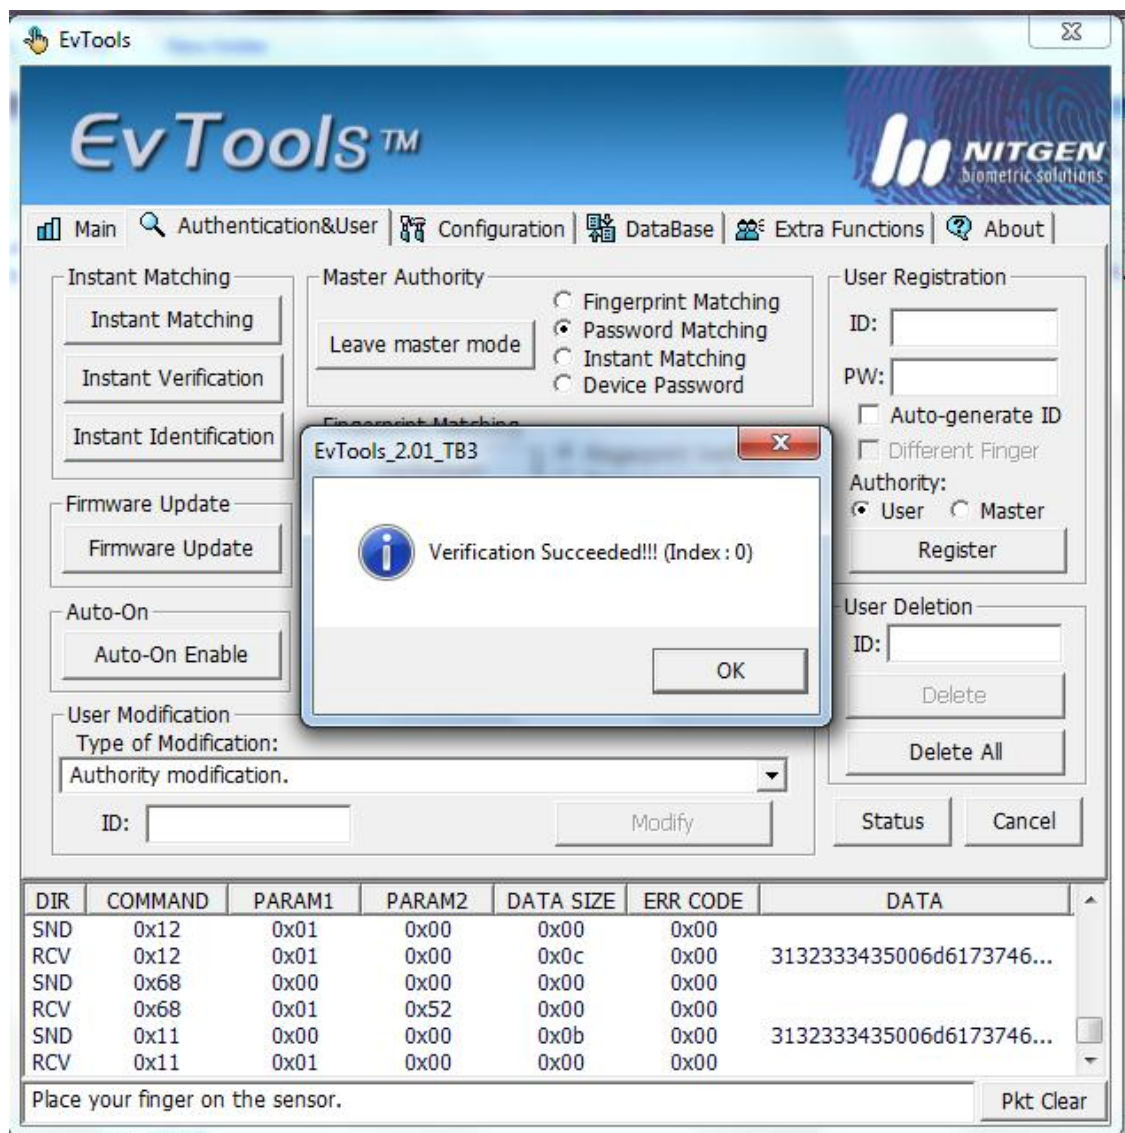


8) TEMPLATE DOWNLOAD:

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 19 of 26	Revision : 0
Controlled Copy	Yes	No		Authorized Signature	
		Release ID : NA			

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

i) To Download the Template, Click on Get Template. Select appropriate format.

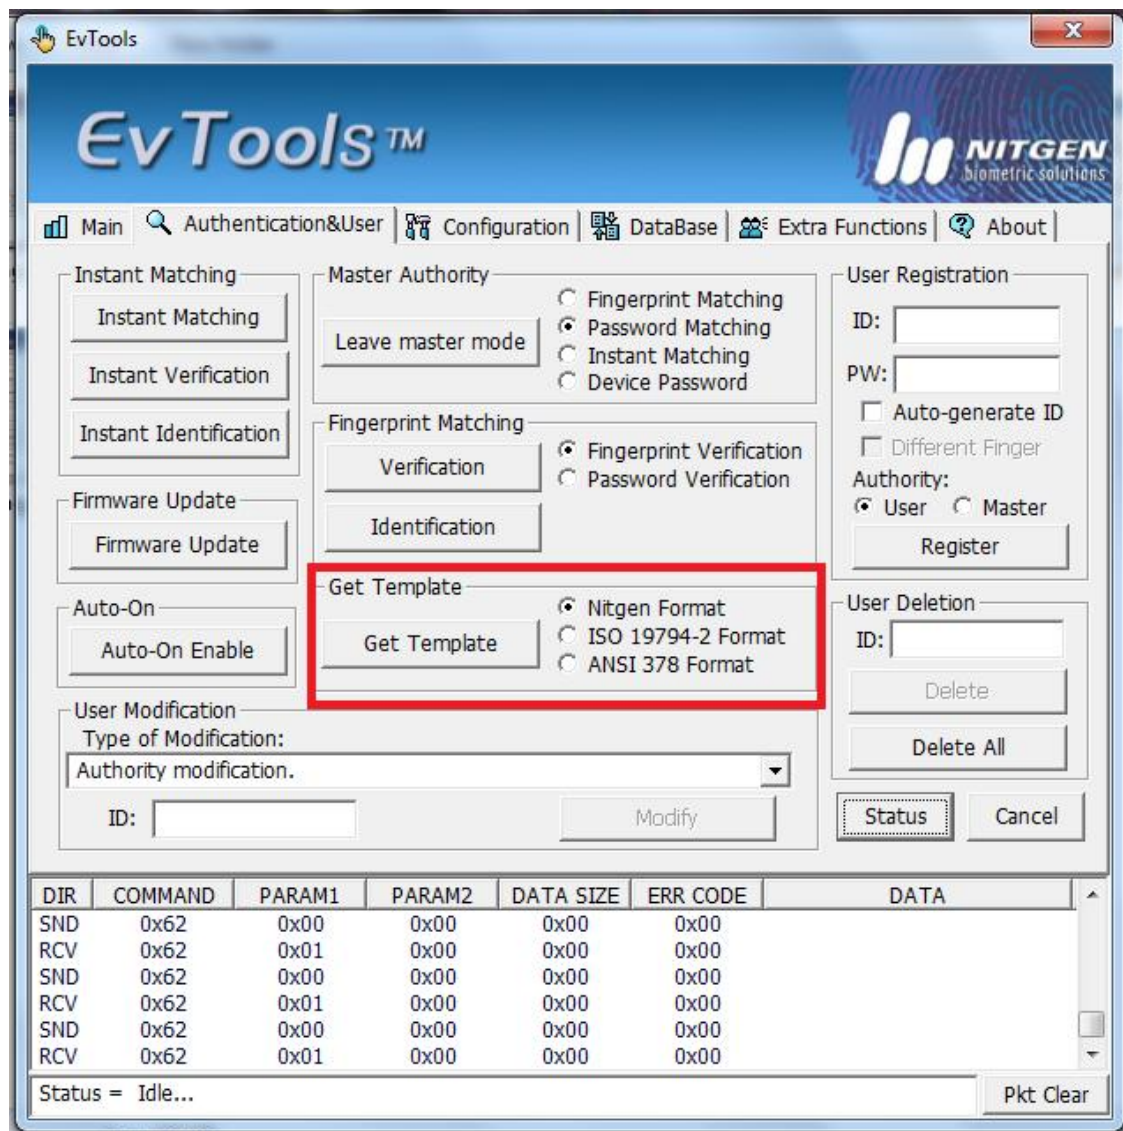


ii) Once you click on Get Template, following window will open.

iii) Click OK and put finger on scanner whose Template you want.

Creator :	Approver:	Version : 1
Distribution : Proprietary Limited Unlimited	Page 20 of 26	Revision : 0
Controlled Copy Yes No	Authorized Signature	
Release ID : NA		

Document ID : USM4745	Document Name : User Manual	Date of Creation : 16/5/2014	Last Modified :
--------------------------	--------------------------------	---------------------------------	-----------------

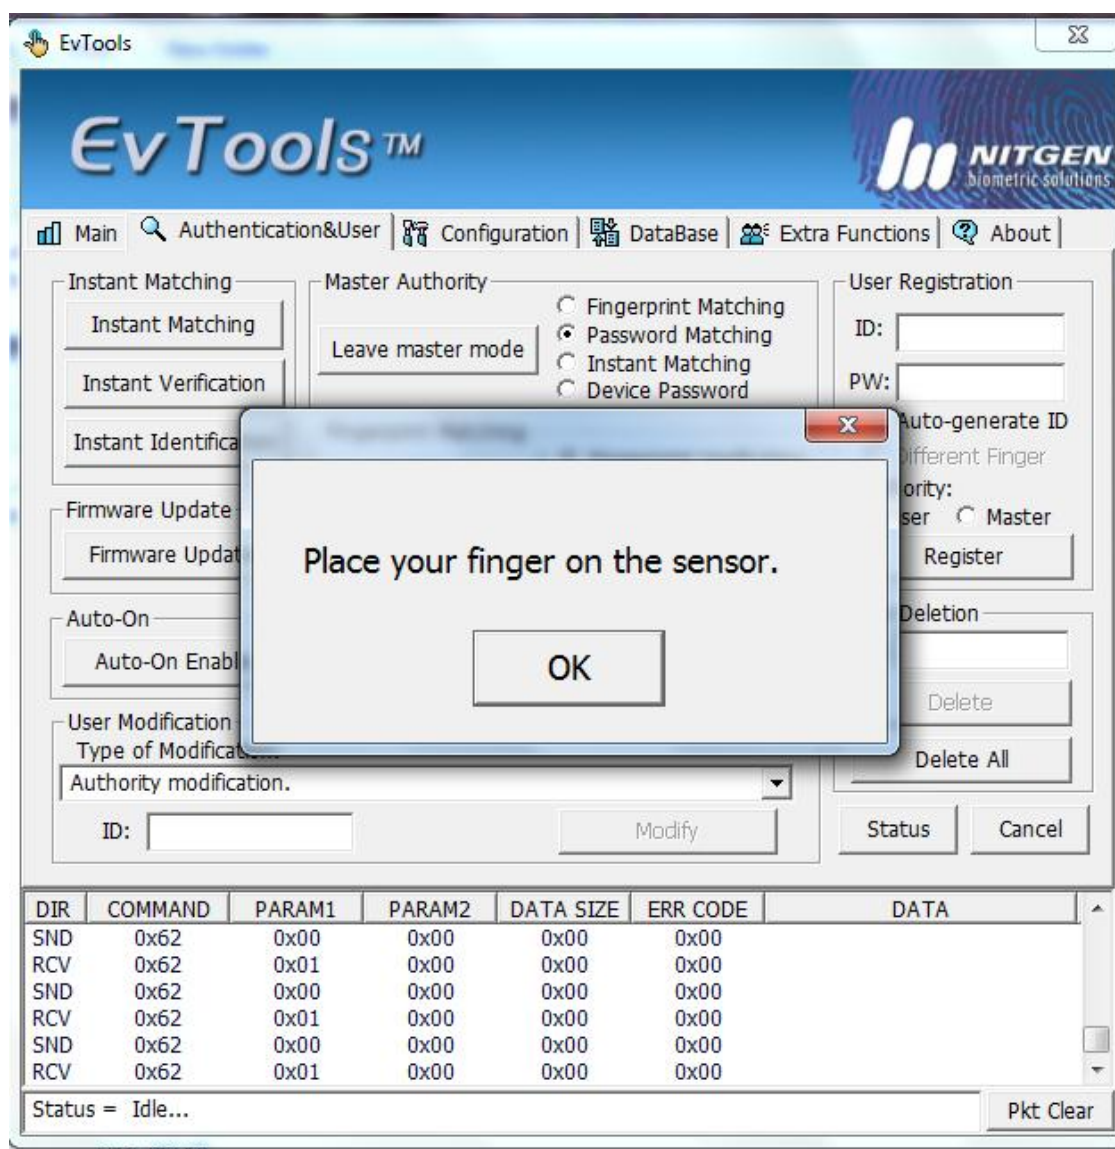

Contact Us

Support Team

Creator :				Approver:	Version : 1
Distribution :	Proprietary	Limited	Unlimited	Page 21 of 26	Revision : 0
Controlled Copy	Yes	No	Authorized Signature		
		Release ID : NA			